

	ITEMS	FREQUENCY	Whichever comes first ⇓	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	600	1200		
				100	1000	2000		
				km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS	DRIVE CHAIN	(NOTE1,2)		I,L	I,L EVERY 300mi (500km) or 50 operating hours!		101 – 103	
	DRIVE CHAIN SLIDER				I	I	104	
	* BRAKE FLUID	(NOTE3)			I	I	115 – 117	
	* BRAKE PAD WEAR	(NOTE1,2)				I	118, 119	
	* BRAKE SYSTEM			I	I	I	115 – 121	
	SKID PLATES, ENGINE GUARD				I	I	128	
	* CLUTCH SYSTEM			I	I	I	107	
	* SUSPENSION				I	I	25 – 27	
	* SPARK ARRESTER				C	C	130	
	* NUTS, BOLTS, FASTENERS			I		I	—	
	** WHEELS/TIRES			I	I	I	122 – 125	
	** STEERING SHAFT HOLDER BEARINGS					I	—	
** STEERING SYSTEM					I	—		

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.