

FUSES

As illustrated in Fig. 4-20, the main fuse (1) and the sub fuses (2) are located in the battery compartment. The main fuse is 30A. The sub fuses are 15 A and 10A.

If a fuse fails frequently, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

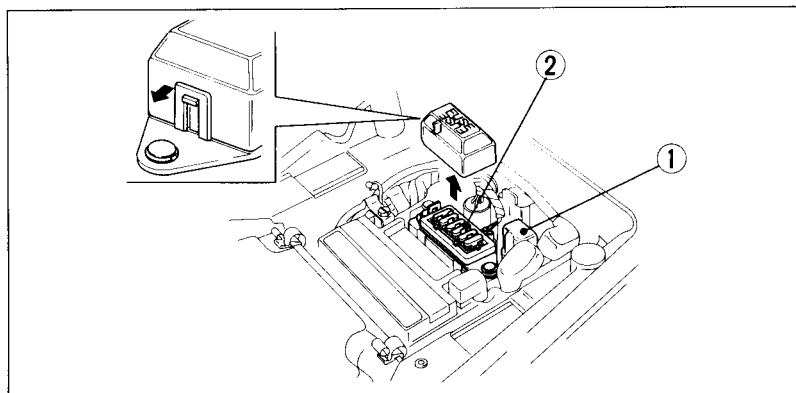


Fig. 4-20

(1) Main fuse

(2) Sub fuses