




Maintenance Component Locations

owner's manual air pressure gauge

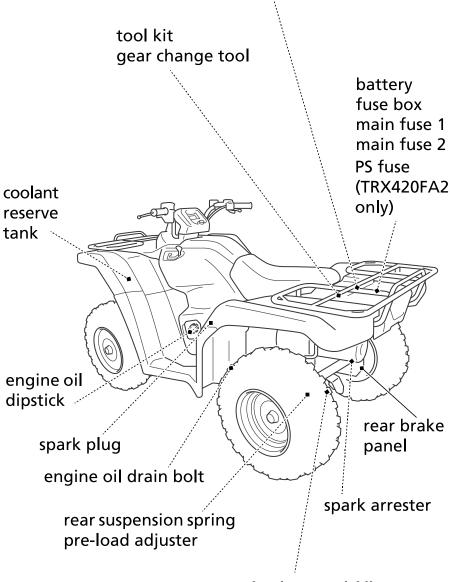

rear final gear oil fill cap rear final gear oil drain bolt



