


Guards

Skid Plate & Engine Guard

Refer to *Safety Precautions* on page 113.

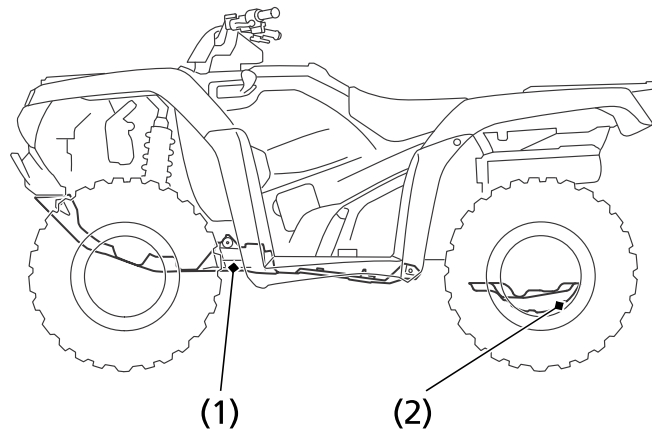

(1) engine guard

(2) skid plates

The engine guard (1) protects the frame and engine crankcase. The skid plate (2) protects the rear final gear case. Check the guard and plate for cracks, damage or looseness at intervals shown in the Maintenance Schedule.

Have the engine guard and skid plates replaced if they are cracked or damaged. If the guard and plate bolts are loose, tighten them securely.