

 


## Clip Removal


### Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.

1.




2.

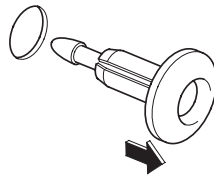


### Installation

1. Push the bottom of the pin.
2. Insert the clip into the hole.
3. Lightly press down on the center pin to lock the clip.

1.

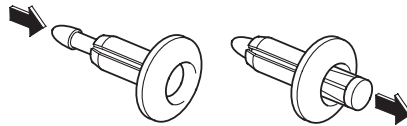

2.

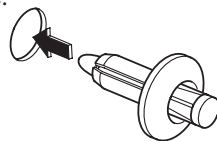

3.

