




If a Fuse Blows

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

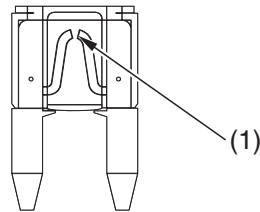

(1) blown fuse



The main fuse and the circuit fuses are located in the battery compartment.

Recommended Fuses

main fuse	30A
shift motor fuse	30A
other fuse	15A × 2, 10A × 2
PS (Electric Power Steering) fuse (TRX420FPA only)	40A

200 Taking Care of the Unexpected

