




## If a Fuse Blows

---

### *Circuit Fuse Access*

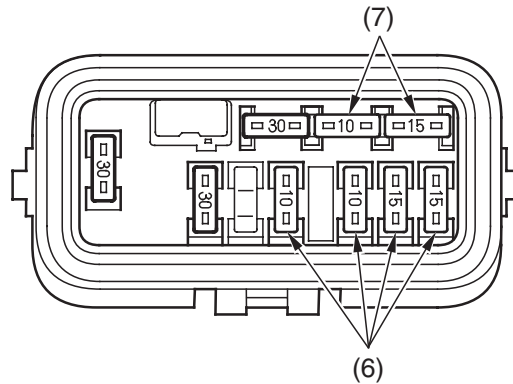

(6) circuit fuses

(7) spare fuses



- To check or replace a circuit fuse (6), pull the old fuse out of its retaining clips.  
If the fuse is blown, replace it with a spare fuse (7) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### **NOTICE**

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

- Install the fuse box cover.
- Install the rear fender cover.
- Install the seat.

## 202 Taking Care of the Unexpected

