

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 242).

Safe Riding Precautions	75
Off-road Use Only.....	75
Keep Hands and Feet on Controls.....	76
Riding Position & Safety Equipment	77
Moving the ATV without Starting the Engine	78
Control Speed	79
Use Care on Unfamiliar or Rough Terrain	79
Do Not Perform Stunts.....	80
Starting & Stopping the Engine.....	81
Preparation.....	81
Starting Procedure	82
Flooded Engine.....	83
Bank Angle Sensor Ignition Cut-off System	83
Stalled Engine.....	84
How to Stop the Engine.....	85
Using the Recoil Starter.....	86
Shifting Gears.....	87
Riding in Reverse	89

(cont'd)