

Riding Your ATV

Riding Through Water

Your ATV is designed to travel through water up to approximately 254 mm (10 inches) deep. Before crossing a stream, make sure the water is not too deep or flowing too fast.

⚠ WARNING

The ATV tyres have some ability to float. Operating this ATV through deep or fast-flowing water may cause a loss of traction and loss of control, which could lead to an accident.

Never operate this ATV in fast-flowing water or in water deeper than that specified in this owner's manual.

NOTICE

Water entering the muffler may damage the oxygen sensor and result in emissions control system malfunction. Have your ATV dealer inspect the oxygen sensor immediately after water enters the muffler.

1. Choose a path where both banks have gradual slopes.
2. Proceed through the water at a slow, steady speed.
3. Watch out for submerged obstacles and slippery rocks.
4. Avoid getting the spark plug or air cleaner wet, as this would cause the engine to stop.
5. After leaving the water, always test both the front and rear brakes.

104 Basic Operation & Riding