


Clip Removal

Removal

1. Pull up the centre pin to release the lock.
2. Pull out the clip of the hole.

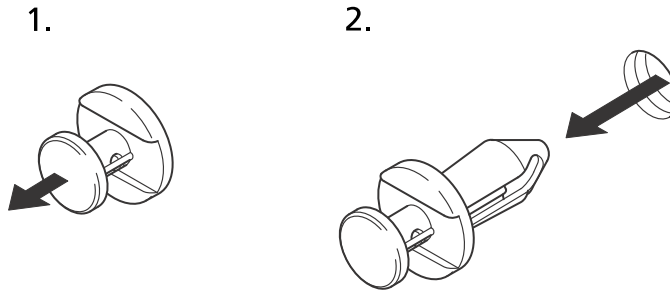

Installation

1. Insert the clip into the hole.
2. Press down the centre pin securely to lock the clip.

