

## Front Final Gear Oil (Except TRX420TM1)


1. Park your ATV on a firm, level surface.
2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring, drain bolt and sealing washer.
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:  
**12 N·m (1.2 kgf·m , 9 lbf·ft)**
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 212).

### NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

6. Fill the front final gear with the recommended oil.  
**210 cm<sup>3</sup> (7.1 US oz , 7.4 Imp oz)**  
Make sure the oil level is at the lower edge of the oil fill inspection hole (3).
7. Coat a new O-ring with grease and install it into the fill cap groove and tighten it to the specified torque:  
**12 N·m (1.2 kgf·m , 9 lbf·ft)**

### FRONT

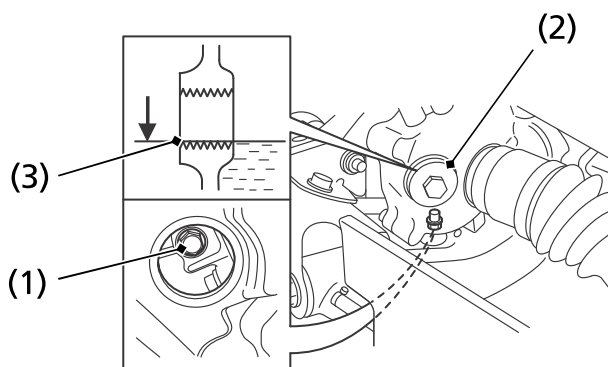

(1) oil drain bolt  
(2) oil fill cap

(3) oil fill inspection hole