



Engine Oil & Filter

Checking & Adding Oil


Refer to *Safety Precautions* on page 89 .

Check the engine oil level each day before operating your ATV and add if needed.

Before riding your ATV, check the engine oil level.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3–5 minutes. Stop the engine and wait 2–3 minutes.
3. Remove the seat (page100).
4. Unsnap and remove the left side cover (1).

LEFT SIDE

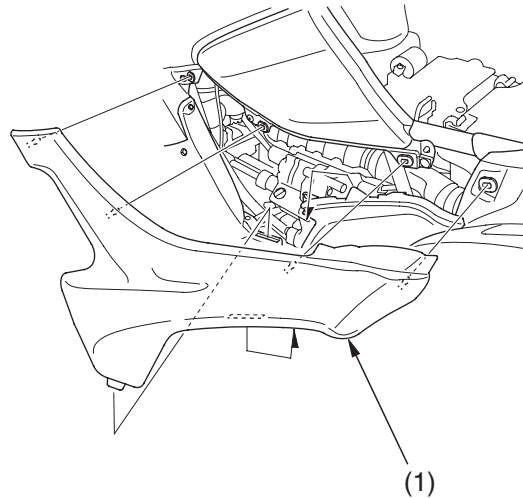

(1) left side cover

