





If a Fuse Blows

Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Remove the seat (page 100).
3. Remove the rear fender cover (page 120).
4. To access the main fuse (2) and shift motor fuse (3), remove the fuse box cover (4).

UNDER REAR FENDER COVER

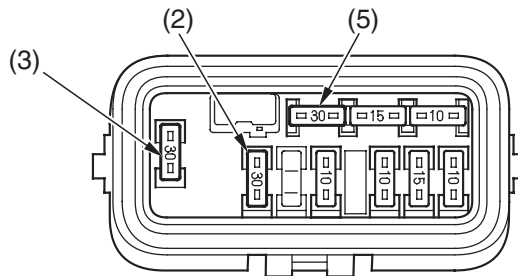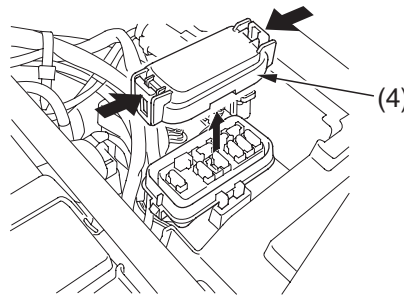

- | | |
|----------------------|---------------------|
| (2) main fuse | (4) fuse box cover |
| (3) shift motor fuse | (5) spare main fuse |

5. Pull the main fuse out.
If it is blown, install the spare main fuse (5).

(cont'd)

