

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		NOTE	HOURS	150	1000	2000	
				km	mi		
		⇨		100	600	1200	
		20	100	200			
DRIVETRAIN BOOTS							159
REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (TRX420FM only)				(R:EVERY 2 YEARS)			114, 116
REAR FINAL GEAR CASE OIL (TRX420TM only)				(R:EVERY 2 YEARS)			114
* 2WD/4WD SELECT SYSTEM (TRX420FM only)							—
* BRAKE FLUID	NOTE 3						140
* BRAKE SHOES WEAR	NOTE 1, 2						147
* BRAKE PADS WEAR	NOTE 1, 2						142
* BRAKELIGHT SWITCH							—
BRAKE SYSTEM							139
* REVERSE LOCK SYSTEM GUARDS							133
							157
* CLUTCH SYSTEM							132
* SUSPENSION							—
* SPARK ARRESTER					C	C	138
* NUTS, BOLTS, FASTENERS							—
** WHEELS/TYRES							—
** TIE-ROD AND JOINT BOOTS							—
** STEERING SHAFT HOLDER BEARINGS							—
** STEERING SYSTEM							—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.