

Tyres

Always check air pressure when your tyres are ‘‘cold.’’ If you check air pressure when your tyres are ‘‘warm’’ – even if your ATV has only been ridden for a few miles – the readings will be higher. If you let air out of warm tyres to match the recommended cold tyre pressures, the tyres will be underinflated. Be sure to check tyre pressure at the riding site, since changes in altitude can affect air pressure.

The recommended ‘‘cold’’ tyre pressures are:

| | | |
|---------------------------------------|-------|--------------------|
| tyre pressure, front & rear (cold) | front | 25.0 kPa (3.6 psi) |
| | rear | 25.0 kPa (3.6 psi) |