




# Indicators & Displays

## Odometer (TRX420FPM only)


When selected, the odometer (1) registers total distance traveled in miles while the ignition is ON (I). To change the display from tripmeter or hourmeter to odometer, press and release the hourmeter/odometer/tripmeter select button (2).

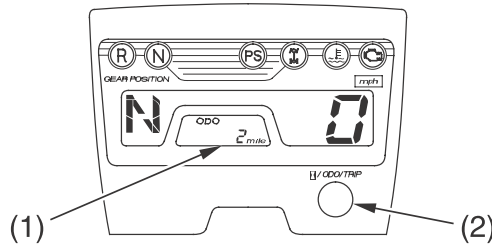

(1) odometer (2) hourmeter/odometer/tripmeter select button

## Tripmeter (TRX420FPM only)

When selected, the tripmeter (1) shows mileage per trip while the ignition is ON (I). To change the display from odometer or hourmeter to tripmeter, press and release the hourmeter/odometer/tripmeter select button (2). To reset the tripmeter to zero, press the hourmeter/odometer/tripmeter select button and hold it in for at least 2 seconds.

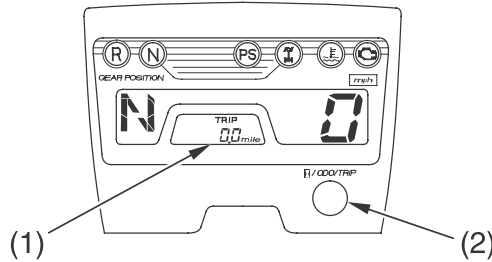

(1) tripmeter (2) hourmeter/odometer/tripmeter select button

