




Indicators & Displays

Hourmeter (TRX420FPM only)

When selected, the hourmeter (1) shows accumulated hours while the ignition is ON (I). The hourmeter provides accurate service period information for initial and regular maintenance. To change the display from odometer or tripmeter to hourmeter, press and release the hourmeter/odometer/tripmeter select button (2). The hourmeter mark (3) will appear.

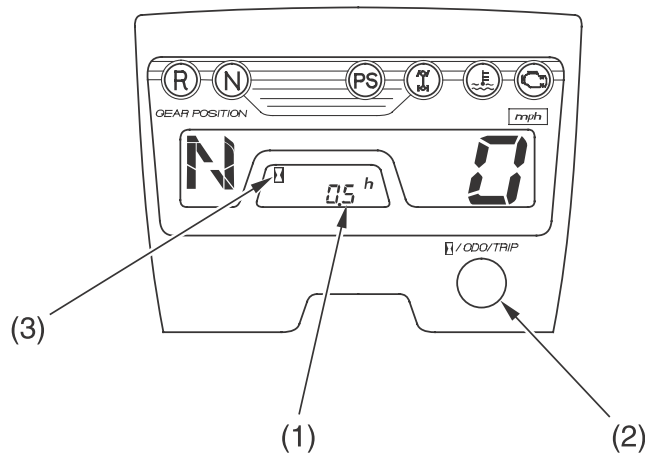

- (1) hourmeter
- (2) hourmeter/odometer/
tripmeter select button
- (3) hourmeter mark

