



# Coolant

## Radiator Core

Refer to *Safety Precautions* on page 89 .

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your dealer if the air flow is restricted over more than 20% of the radiator surface.

Clean the radiator core after riding the ATV in mud.


*To clean the radiator core and radiator grill plate:*

1. Unhook the tabs A ( 1 ) and remove the radiator grill under cover ( 2 ).
2. Remove the clips ( 3 ) (page 101 ) and radiator grill covers ( 4 ).
3. Unhook the tabs B ( 5 ) and remove the couplers ( 6 ).

### NOTICE

*Do not apply pressured water directly to the radiator core. The pressured water can damage the radiator core.*

FRONT

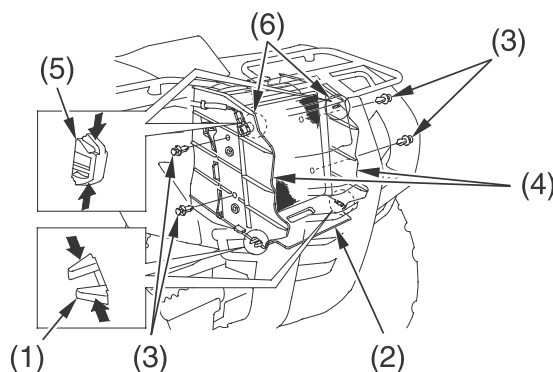

- |                                |                           |          |
|--------------------------------|---------------------------|----------|
| (1) tabs A                     | (4) radiator grill covers |          |
| (2) radiator grill under cover | (5) tabs B                |          |
| (3) clips                      | (6) couplers              | (cont'd) |

