





If a Fuse Blows

Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (O) before checking or replacing the fuses.
2. Remove the seat (page 100).
3. Remove the rear fender cover (page 121).
4. To access the main fuse (2), remove the fuse box cover (3).

UNDER REAR FENDER COVER

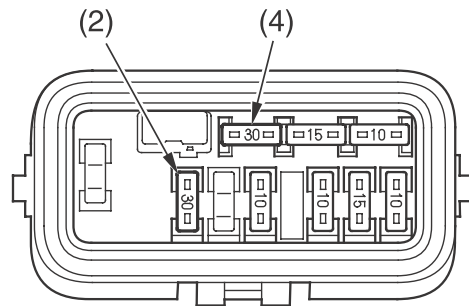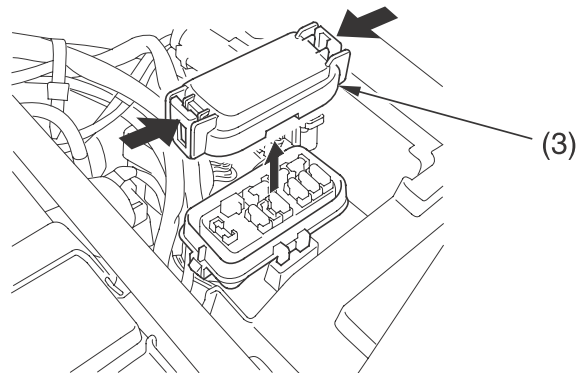

(2) main fuse

(4) spare main fuse

(3) fuse box cover

5. Pull the main fuse out.

If it is blown, install the spare main fuse (4).

198 Taking Care of the Unexpected

