




If a Fuse Blows

Circuit Fuse Access

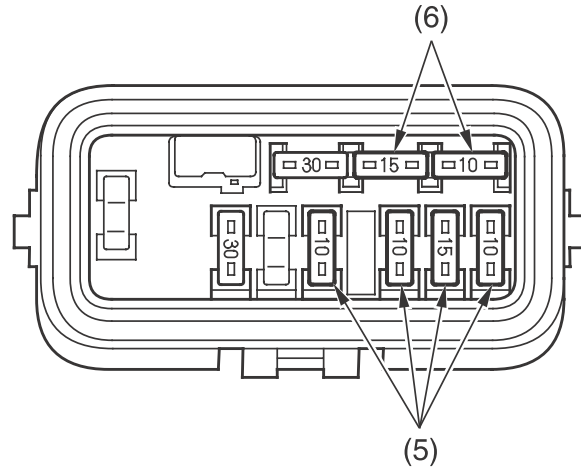

(5) circuit fuses

(6) spare fuses



- To check or replace a circuit fuse (5), pull the old fuse out of its retaining clips.
If the fuse is blown, replace it with a spare fuse (6) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

- Install the fuse box cover.
- Install the rear fender cover.
- Install the seat.

