

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 194).

For information about carburetor adjustment for riding at high altitude, see page 195.

Safe Riding Precautions	53
Off-Road Use Only	53
Keeps Hands and Feet on Controls	54
Control Speed.....	55
Use Care on Unfamiliar or Rough Terrain.....	56
Do Not Perform Stunts.....	57
Starting & Stopping the Engine	58
Preparation	58
Starting Procedure.....	59
Flooded Engine	61
How to Stop the Engine	61
Using the Recoil Starter	62
Shifting Gears	63
Riding in Reverse.....	65

(cont'd)