

Spark Plug

6. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.

Tighten the spark plug:

- about 1/8 – 1/4 turn after it seats (if the old plug is good).
- about 1/2 turn after it seats (if installing a new plug).

NOTICE

Improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

7. Connect the spark plug cap.