

Brakes

6. Push down the parking brake pin (7) and then squeeze the clutch lever (8) until firm resistance is felt. Measure the distance the clutch lever has moved; the distance should be:


1 – 1 3/16 in (25 – 30 mm)

7. If necessary, turn the adjuster (3) and tighten the lock nut (2).
Adjust the clutch lever.

Free play (page 110) is:

3/8 – 13/16 in (10 – 20 mm)

LEFT HANDLEBAR

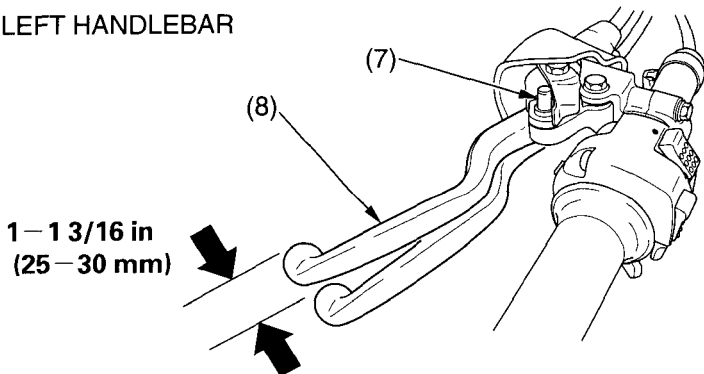

(7) parking brake pin

(8) clutch/parking brake lever