

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES		INITIAL	REGULAR		Refer to page	
			FIRST	mi	MAINT.	MAINT. INTERVAL			
			⇨	km	100	600	1200		
			NOTE	HOURS	150	1000	2000		
				20	100	200			
EMISSION RELATED ITEMS	*	FUEL LINE					I	—	
	*	THROTTLE OPERATION					I	108	
		AIR CLEANER	NOTE 1				C	C	105
		SPARK PLUG					I		115
	*	VALVE CLEARANCE/ DECOMPRESSOR SYSTEM					I		118
		ENGINE OIL			R	R	R		86
		ENGINE OIL FILTER			R	R	R		89
	*	TRANSMISSION OIL				R	R		93
	*	ENGINE IDLE SPEED			I	I	I		114
		RADIATOR COOLANT	NOTE 3			I	I		98
	*	COOLING SYSTEM	NOTE 2			I	I		99

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 198).