
## **Indicators**

## **Neutral Indicator (TRX450ER only)**

## CENTRE OF HANDLEBAR

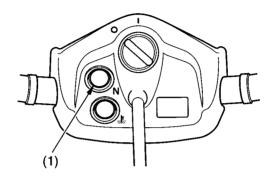

## (1) neutral indicator

The neutral indicator will light when the transmission is in neutral and the ignition switch is ON (  $\parallel$  ).

If the indicator does not come on when it should, have your Honda dealer check for a burned-out bulb or other problems.