



Starting & Stopping the Engine

(TRX450R)

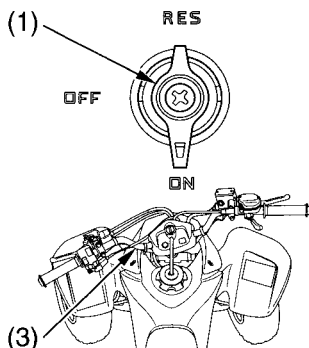

(1) fuel valve
(2) ignition switch

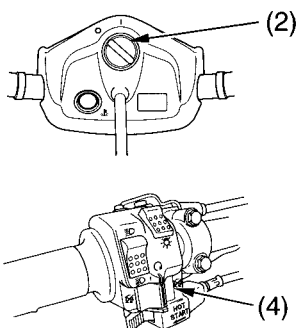

(3) handlebar
(4) engine stop switch

1. Before starting, select a level surface and lock the parking brake (page 25).
2. Turn the fuel valve (1) and ignition switch (2) to ON (I).
3. Turn the handlebar (3) all the way to left.

Confirm the following:

- The transmission is in neutral (the tyres roll freely).
- The engine stop switch (4) is set to RUN (O).

The high coolant temperature indicator should go off a few seconds after the engine starts.