

# Starting & Stopping the Engine

## Starting Procedure

The carburetor is equipped with an accelerator pump. Do not open the throttle when starting the engine. This will flood the engine with excess fuel, resulting in hard starting.

To restart a warm engine, follow the procedure for “*High Air Temperature.*”


(TRX450ER only)

The starter motor will operate when the transmission is in neutral or pull in the clutch lever.

Normal Air Temperature 10° – 35°C (50° – 95°F)


(TRX450ER)

LEFT SIDE

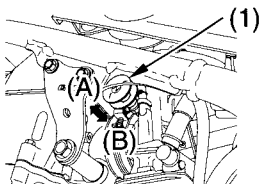

(1) choke knob  
(2) start button

LEFT HANDLEBAR

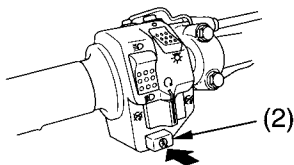

(A) fully ON  
(B) fully OFF

1. Pull the choke knob ( 1 ) left all the way to fully ON (A) position, if the engine is cold.
2. With the throttle closed, press the start button ( 2 ).

- Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the start button for approximately 10 seconds before pressing it again.