


Battery (TRX450ER only)

The battery is located in a compartment under the left rear fender.

LEFT SIDE

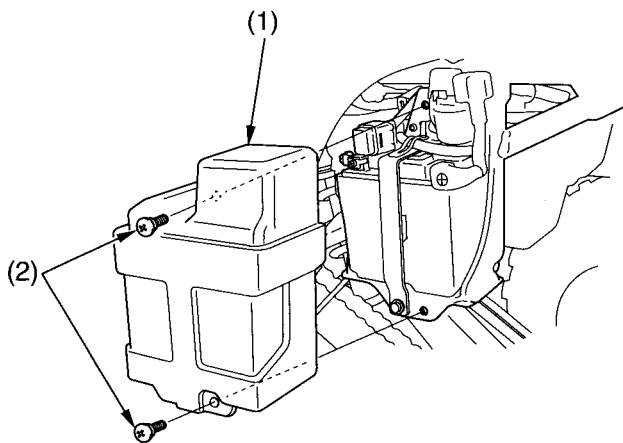

(1) battery cover

(2) screws

Removal

1. Make sure the ignition switch is OFF (\bigcirc).
2. Remove the battery cover (1) by removing the screws (2).

(cont'd)