





Storing Your Honda

- Pour a tablespoon (15–20 cm³) of clean engine oil into the cylinder and cover the spark plug hole with a piece of cloth.

(TRX450ER)

- With the engine stop switch in the OFF () position, press the start button several times to crank the engine and distribute the oil.

(TRX450R)

- With the engine stop switch in the OFF () position, depress the kickstarter several times to crank the engine and distribute the oil.
- Reinstall the spark plug and spark plug cap.

8. (TRX450ER only)

Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 163) once a month.



WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.

9. Wash and dry your ATV. Wax all painted surfaces.
10. Lubricate the drive chain (page 157).
11. Inflate the tyres to their recommended pressures (page 145).
12. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.

176 Tips

