

PARTS OPERATION

POWER CONTROLS

Ignition Switch

The ignition switch (Fig. 2-5) is in the center of the handlebars directly in front of the seat.

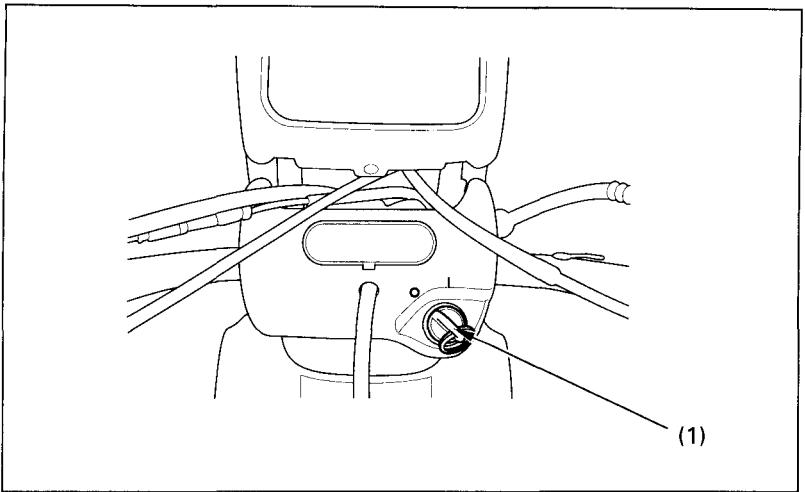


Fig. 2-5

(1) Ignition switch

| Key Position | Function | Key Removal |
|--------------|---|----------------------------|
| OFF (O) | The engine and headlight cannot be operated. | The key can be removed. |
| ON (I) | The headlights and assist headlight can be turned on. With the engine stop switch at RUN and the transmission in neutral, the engine can be started. | The key cannot be removed. |