

Radiator Core

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your Honda dealer if the air flow is restricted over more than 20 % of the radiator surface.

To clean the radiator core, oil cooler and radiator cover plate:

1. Remove the clip (Fig. 4-20).
2. Slide the radiator cover plate up and remove it.
3. Wash the radiator core, oil cooler and radiator cover plate.

NOTE:

- * Clean the radiator core after riding the FOURTRAX in mud.
- * Do not apply pressured water directly to the radiator core and oil cooler. The pressured water can damage the radiator core.

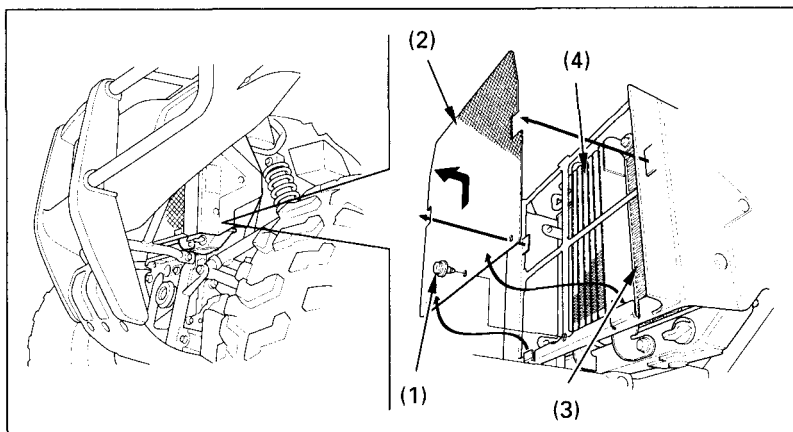


Fig. 4-20

(1) Clip

(2) Radiator cover plate

(3) Radiator

(4) Oil cooler

While reading this manual, remember:

▲WARNING

Indicates a strong possibility that serious injury or death may result if instructions are not followed.