

## Shift Switches

Two shift switches (Fig. 2-26) are located next to the left handlebar grip: upshift ( $\uparrow$ ) and downshift ( $\downarrow$ ).

These switches are used in the ESP (manual shift) mode (page 36).

Your FOURTRAX has five forward shift positions: 1, 2, 3, 4, and 5.

The shift switches work only when the engine is running.

To upshift the transmission, press the upshift switch (1) once for each higher position.

To downshift the transmission, press the downshift switch (2) once for each lower position.

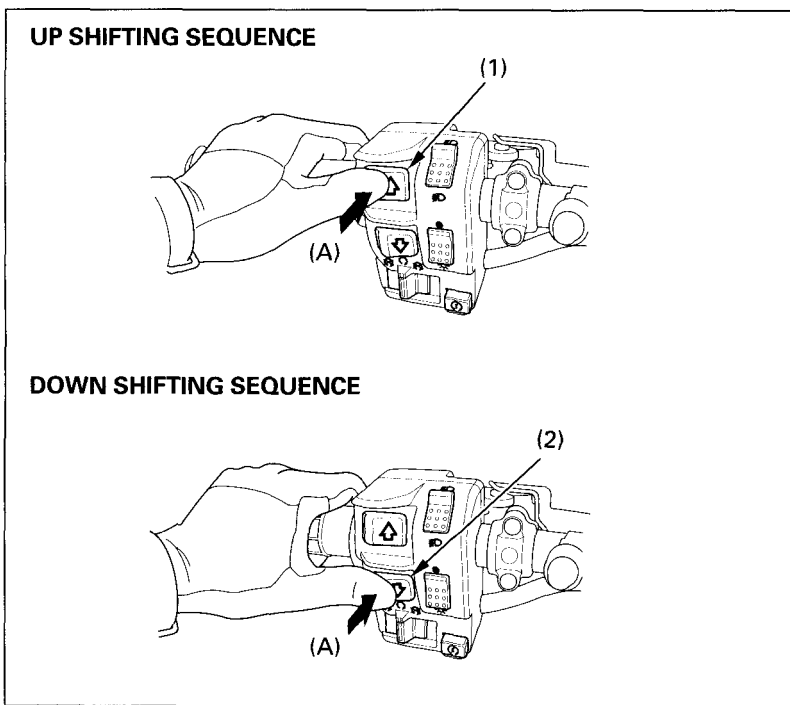


Fig. 2-26

(1) Upshift switch

(A) Push

(2) Downshift switch