

Flooded Engine

If the engine does not start after several attempts, it may have become flooded with excess fuel. To clear the engine:

1. Turn the engine stop switch \otimes (OFF).
2. Push the choke knob to the OFF position.
3. Hold the throttle fully open and briefly press the starter button or operate the recoil starter several times.
4. When the engine is cleared, wait 10 seconds. Then turn the engine stop switch to \bigcirc (RUN) and repeat the normal starting procedure, but don't use the choke.

Stalled Engine

If the engine stalls, shift into Neutral (N) and restart the engine.

If you are unable to shift to Neutral (N) from Low (L) or Drive (D), you can restart the engine by squeezing the front brake lever and pressing the starter button while the vehicle is stopped.

Do not press the throttle while starting in gear. Your FOURTRAX is equipped with a start inhibitor system that will cut off the ignition if the throttle is open while attempting to start in gear.

Once you have started the engine, release the front brake lever, then apply throttle gradually.

Low Battery

If the battery is low or dead, use the recoil starter (page 19) to start the engine.

High Altitude Adjustment

For operation above 1,000 m (3,000 feet), it may be necessary to switch to high altitude carburetor jetting (see page 116).