

7. Gently wash the air cleaner and sub air clener in clean, non-flammable (high flash point) solvent such as kerosene— not gasoline.  
Allow the air clener to dry throughly before applying oil. A wet air cleaner will not fully absorb the oil.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Using petrol or low flash point solvents for cleaning ATV parts.**

### **WHAT CAN HAPPEN**

**A fire or explosion could result.**

### **HOW TO AVOID THE HAZARD**

**Use only a nonflammable or high flash point solvent to clean ATV parts.**

8. Soak the air cleaner in clean gear oil (SAE 80—SAE 90) or an equivalent until saturated, then squeeze out the excess oil.

### **CAUTION:**

**Twisting the air cleaner when squeezing out excess oil could damage the air cleaner.**

9. Reassemble by reversing the disassembly sequence.
- Install the air cleaner housing cover with the FRONT mark ( 11) facing forward and fit the cut out of the tab (12) at the end of the air cleaner.