

## FUSE

As illustrated in Fig.4-23 , the fuse box (1) is located in the battery compartment. The main fuse, sub fuses and spare fuses are located in the fuse box.

The specified main fuse is:

30 A

The specified sub fuses are:

15 A  $\times$  2, 10 A  $\times$  2

If a fuse fails frequently, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

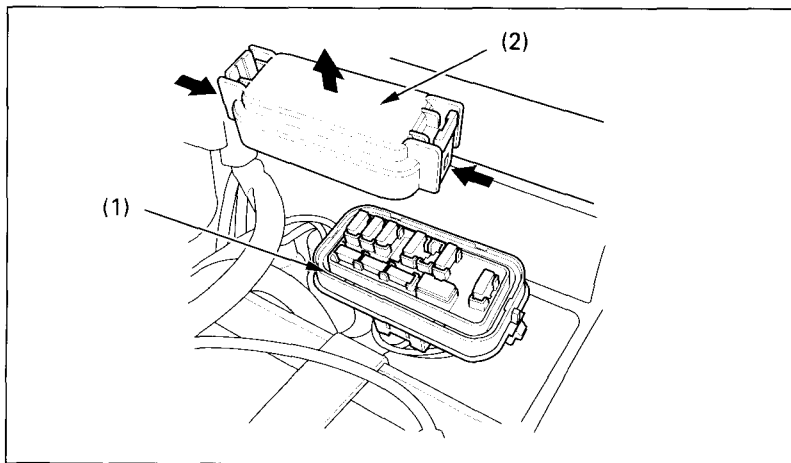


Fig. 4-23

(1) Fuse box  
(2) Fuse box cover

To replace the main fuse and control motor fuse:

1. Make sure the ignition switch is OFF (  $\bigcirc$  ).

### CAUTION:

Turn the ignition switch  $\bigcirc$  (OFF) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.