

Choke	
Cable	114
Knob	16, 114
Cleaning.....	163
Climbing hills	85
Cooling system	
Checking coolant level and adding coolant	129
Coolant recommendations	130
Coolant replacement.....	131
Crossing slopes.....	94

D

Differential oil.....	124
Digital clock	31
Dimmer switch	21
Dipstick	43, 117
Display (see Multi-function display)	24
Drive mode select switch.....	34
Driveshaft boots.....	159

E

Engine	
Idle speed adjustment.....	115
Break-in procedures	ii
Flooded engine	76
Starting the engine.....	73
Engine guard and skid plates	156
Engine oil	
Changing oil.....	120
Checking oil level and adding oil.....	117
Oil filler cap.....	43, 117
Oil filter	120
Oil/coolant high temperature indicator.....	22
Recommendations	119
Engine stop switch.....	15
Exhaust system	
Cleaning	53
Purging.....	157