

Indicators & Display

5	Odometer/tripmeter select button	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 22).
6	Hourmeter/digital clock select button	Selects display of the hourmeter or digital clock (pages 23 , 24).
7	Hour select button	Advances the hour displayed by the digital clock (page 24).
8	Minute select button	Advances the minutes displayed by the digital clock (page 24).