
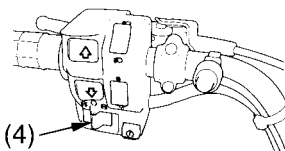
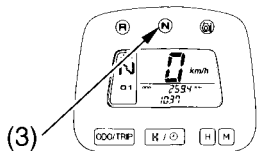
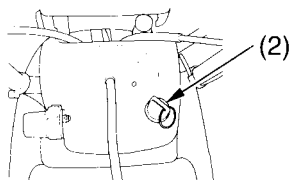


# Starting & Stopping the Engine

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your ATV's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

## Preparation

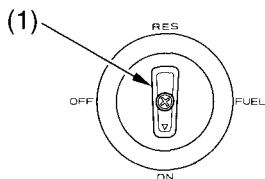

(1) fuel valve

(2) ignition switch

(3) neutral indicator

(4) engine stop switch

1. Before starting, Select a level surface and lock the parking brake (page 36 ).
2. Turn the fuel valve ( 1 ) and ignition switch ( 2 ) to ON ( I ).

Confirm the following:

- The transmission is in NEUTRAL (neutral indicator ( 3 ) light ON).
- The engine stop switch ( 4 ) is set to RUN ( O ).

The oil/coolant high temperature indicator should go off a few seconds after the engine starts.