


Shifting Gears

Two gearshift switches are located next to the left handlebar grip: upshift (\triangle) and downshift (∇).


To upshift the transmission, press the upshift switch (4) once.

To downshift the transmission, press the downshift switch (5) once.

UP SHIFTING SEQUENCE

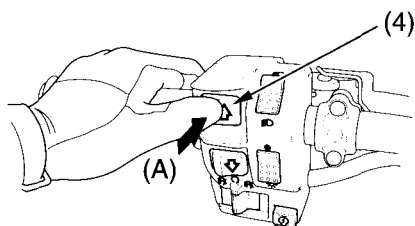

DOWN SHIFTING SEQUENCE

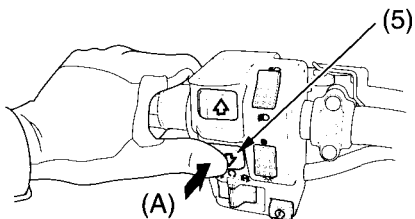

(4) upshift switch
(5) downshift switch

(A) push