

# Shifting Gears

---

After starting the engine and letting it warm up, follow these procedures:

1. With the throttle closed, select the drive mode and shift the gearshift lever by pressing the release button.

If the vehicle won't shift easily into D or L, rock the vehicle slightly while moving the lever. This will help align the gears in the sub-transmission.

## NOTICE

*If the gearshift lever is moved while the vehicle is moving, the sub-transmission may be damaged.*

2. Release the parking brake, but continue squeezing the rear brake lever.
3. Release the rear brake lever and increase engine speed by gradually opening the throttle.

Driving in ESP (manual shift) mode:

1. Follow steps 1-3 for above.
2. When speed increases, release the throttle and upshift to 2nd position by pressing the upshift switch once.
3. Repeat this sequence to progressively upshift to 3rd, 4th and 5th (top) position.
4. To downshift, press the downshift switch once. Remember to close the throttle each time you shift to the next lower position.

(cont'd)