


Engine Oil & Filter

2. Stop the engine, place an oil drain pan under the oil tank and crankcase. Remove the oil filler cap, the drain plug (1) on the oil tank and drain plug (2) on the crankcase.

UNDER ENGINE

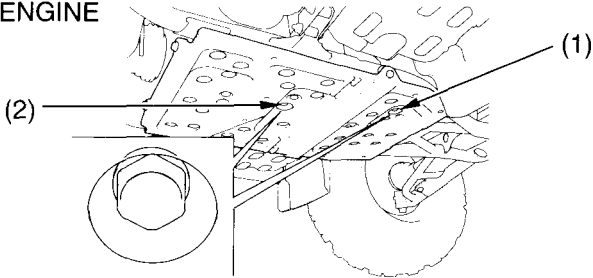


- (1) drain plug (oil tank)
- (2) drain plug (left crankcase)

Install a New Engine Oil Filter:

3. Remove the front engine guard (3) by removing the mount bolts (4) and washers (5).

UNDER ENGINE

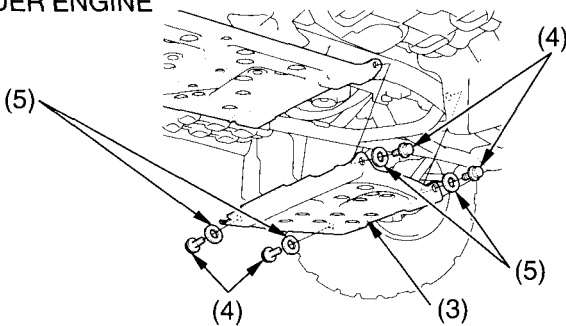

- (3) engine guard
- (4) bolts
- (5) washers