

Coolant


Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.

Checking & Adding Coolant


Refer to *Safety Precautions* on page 99.

Check the engine coolant level each day before operating your ATV and add if needed.

RIGHT SIDE

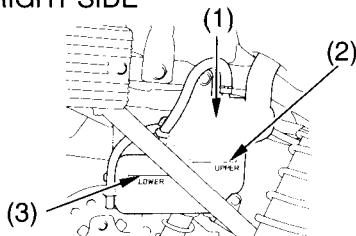

- (1) reserve tank
(2) UPPER level mark
(3) LOWER level mark

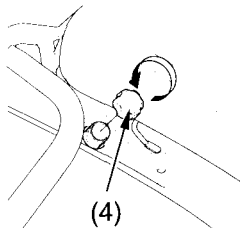

- (3) LOWER level mark
(4) reserve tank cap

1. Make sure the vehicle is on the level ground.
2. With the engine at normal operating temperature, check the coolant level in the reserve tank (1). It should be between UPPER (2) and LOWER (3) level marks.
If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.
3. Remove the reserve tank cap (4).
Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.