



Spark Plug

Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 99 .

1. Remove the seat (page 110).
2. Loosen the screw (1) and remove the resonance chamber (2).
3. Clean any dirt from around the spark plug base.
4. Disconnect the spark plug cap (3). Take care to avoid damaging the spark plug wire when disconnecting the cap.
5. Using the spark plug wrench provided in the tool kit, remove the spark plug.
6. Inspect the electrodes and centre porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
7. Make sure that a 1.2 mm wire-type feeler gauge cannot be inserted between the spark plug gap (4). If the gauge fits in the gap, replace the plug with a new one.

UNDER SEAT

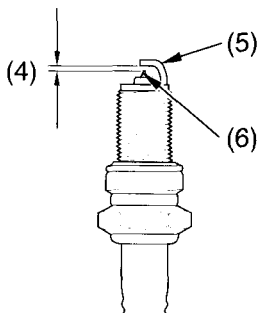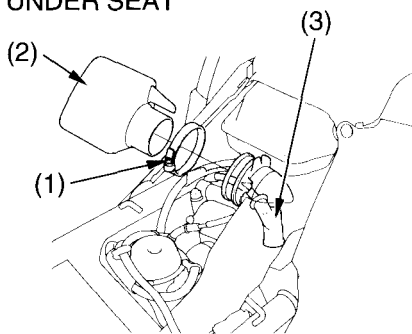

- (1) screw
- (2) resonance chamber
- (3) spark plug cap

- (4) spark plug gap
- (5) side electrode
- (6) centre electrode