

Indicators & Displays

5	Minute select button	Advances the minutes displayed by the digital clock (page 24).
	Minus button (TRX 500 FGA)	Advances the latitude and longitude when in the GPS mode.
6	Hour select button	Advances the hour displayed by the digital clock (page 24).
	Plus button (TRX 500 FGA)	Advances the latitude and longitude when in the GPS mode.
7	Hourmeter/digital clock select button	Selects display of the hourmeter or digital clock (pages 23 , 24).
	WP button (TRX 500 FGA)	This button is used to input a waypoint or to erase waypoint data.
8	Odometer/tripmeter select button	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 22).
	Mode select button (TRX 500 FGA)	This button is used to select the odometer, tripmeter, hourmeter, digital clock or GPS navigation mode.