

Indicators & Displays


Oil Change Indicator

The oil change indicator (1) appears in the display when the mileage or operating hours on your ATV approaches the oil change interval specified on the maintenance schedule.

Reset the indicator after each oil change.

To reset the indicator, press and hold both the odometer/tripmeter (mode) select button (2) and digital clock/hourmeter select (WP) button (3) for more than 2 seconds. The indicator will disappear.

If the oil is changed before the oil change indicator appears, be sure to reset the oil change indicator after changing the oil. The indicator will appear for 2 seconds, then disappear. This means the indicator is reset.

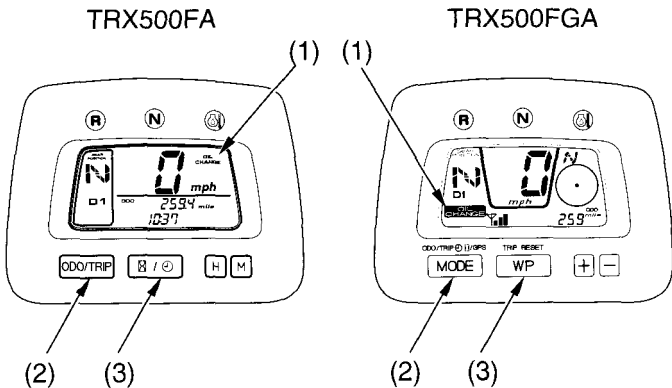

(1) oil change indicator
(2) odometer/tripmeter
select button
mode select button
(TRX500FGA)

(3) digital clock/hourmeter
select button
WP button (TRX500FGA)