

# GPS Mode


There are two methods for marking waypoints.

- Basic (to select your current position)
- Advanced (to input desired destinations)


## Basic Waypoint Selection

*To Mark Your Present Position:*

1. Turn the ignition switch ON ( 1 ).
2. Use the mode select button to select the GPS mode.
3. To select a higher waypoint number ( 1 ), press and release the plus button ( 2 ).  
To select a lower waypoint number, press and release the minus button ( 3 ).  
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the WP button ( 4 ) for about 2 seconds, until the waypoint number flashes. Then release the button.

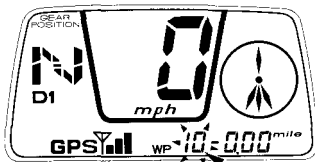

(1)

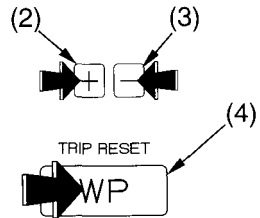

(1) waypoint number  
(2) plus button

(3) minus button  
(4) WP button