

GPS Mode

To Correct Input:

Push the mode select button (13). This reverses the sequence so you can back up and make a correction.

Once the 1/10 second longitude entry is completed, you can no longer back up in the sequence to make a correction.

To Change the Coordinates for an Existing Waypoint Number:

Follow steps 1 – 4 under *Advance Waypoint Selection* (page 65) and “overwrite” your previous waypoint.

Determining the Coordinates of Your Current Position

1. If your current position is not already marked, mark it (page 61).
2. Press and hold the WP button until the display begins blinking.
3. While the display is still blinking, press and hold the WP button again until the display shows LAT degrees and minutes.
4. Tap (do not hold) the WP button repeatedly to sequence through the coordinates display.
5. Tap the WP button again to return to the distance to waypoint display.