


# Seat Removal

---

Refer to *Safety Precautions* on page 127.

The seat must be removed for the air cleaner, spark plug, battery and fuse maintenance.

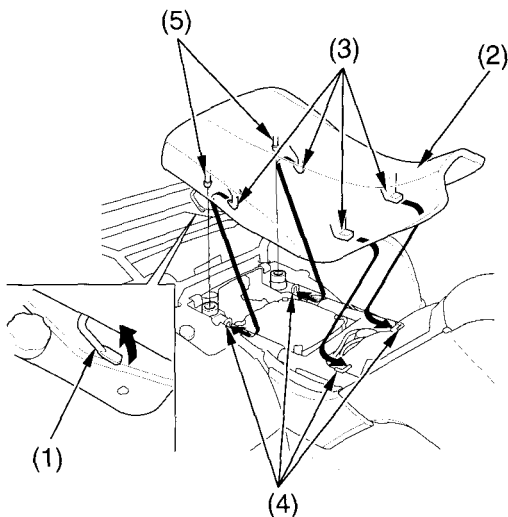

(1) seat lock lever

(2) seat

(3) front prongs

(4) hooks

(5) studs

## Removal

1. Pull the seat lock lever (1) at the right side of the seat.
2. Slide the seat (2) back and lift it.

## Installation

1. Insert the prongs (3) into the hooks (4) on the frame and press the studs (5) into the grommets on the battery holder.
2. Press down on the seat until locks.