

Engine Oil & Filter


- Remove the oil filter bolt (6) and oil filter cover (7).
Let the remaining oil drain out.
 - Remove the oil filter (8) from the cover.
 - Remove the spring and washer. Do not discard the washer with the old oil filter.
 - Discard the oil filter.
 - Check the O-rings (9) are in good condition and then insert a new oil filter to the oil filter cover.
- Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.
- Install the oil filter cover and tighten the oil filter bolt. Make sure the oil filter bolt is tightened securely to the specified torque.

Oil filter bolt torque:

13 lbf·ft (18 N·m , 1.8 kgf·m)

NOTICE

Improper installation of the oil filter can cause serious engine damage.

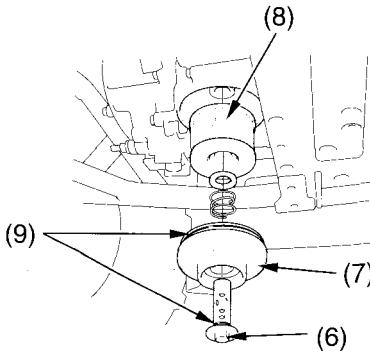

(6) oil filter bolt
(7) oil filter cover

(8) oil filter
(9) O-rings