




## GPS Mode

12. To enter the displayed tenths of a second in the system, tap (do not hold) the WP button until LON appears above the WP mark. The compass direction indicator will flash Eastern Longitude (12) or Western Longitude (13).  
(To switch to the other hemisphere, press either the plus or minus button.)

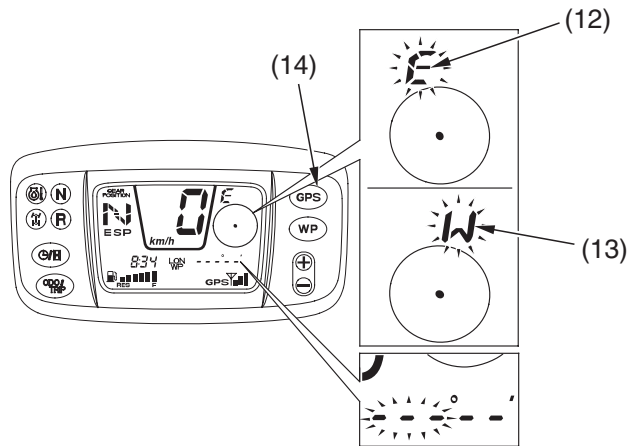

- (12) Eastern Longitude      (14) GPS button  
(13) Western Longitude

13. To enter the longitude coordinates, follow the same procedure used in steps 6 – 11.

### *To Correct Input:*

Push the GPS button (14). This reverses the sequence so you can back up and make a correction.

Once the 1/10 second longitude entry is completed, you can no longer back up in the sequence to make a correction.

(cont'd)

